
A Common Platform for Advanced Analysis

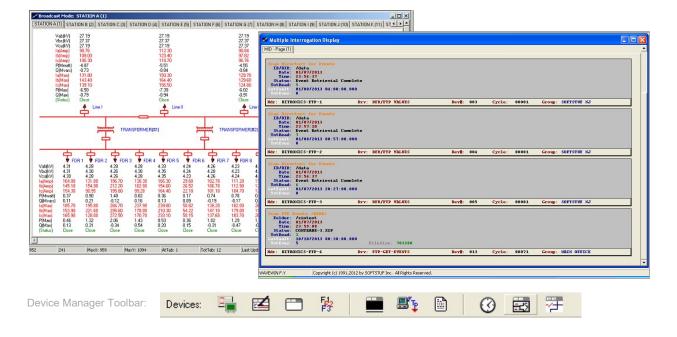


Product Description

The software is used to collect protection data from various types of protection devices such as numerical relays, disturbance recorders, event recorders, digital meters, and smart sensors. The software includes an extensive library of polling drivers for both proprietary and standard protocols.

The collected data includes digital fault records, sequence of events records, metering logs, device settings, and health checks. The data is collected and managed in compliance with NERC requirements for Disturbance Monitoring Equipment.

The software also includes specialized applications for access control and password management providing compliance with NERC CIP requirements. The software also offers a powerful historian for display, management, query, and archival of protection data.

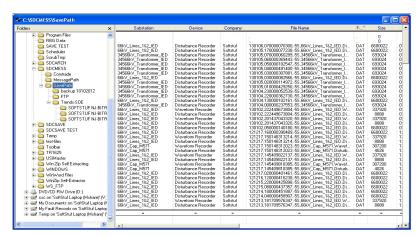

PO Box 40245, Philadelphia, PA 19106 Tel: 800.818.3463 • Fax: 609.677.8736 • <u>www.softstuf.com</u> • sales@wavegrid.net

Features

- Polls up to 2000 devices simultaneously (periodically or upon demand).
- Supports RS232, RS485, Modem (ASCII, Binary), and Ethernet communications (TCP/IP, FTP, Telnet).
- Supports both star and multi-drop network topologies and reports periodically or by exception.
- Provides health checks including communications integrity, access logs, and polling errors.
- Provides terminal interfaces with programmable function keys and escape sequences.
- Imports/Exports spreadsheets (CSV files) for rapid configuration development and maintenance.
- Interfaces to Active directory for username and password authentication.
- Supports IEEE Std. C37.232 (COMNAME) Common Format for Naming Time Sequenced Data.
- Supports IEEE Std. C37.111 (COMTRADE) Common Format for Transient Data Exchange.

Device Configuration	n for BITRONICS DIAL UP	- 02		
Device Information:				
Device Number:	92	Password 1:	aaaa (CMND1)	
Data Type:	BINARY -	Password 2:	0 (CMND2)	
Title:	BITRONICS DIAL UP - 02	Event File Type:	Default	(CMND5)
Driver:	POLL BI EVENTS	Save Path:	C:\FAULTLIB\SDCSAVE	CMND6)
Stn-Group:	SOFTSTUF MAIN OFFICE	Log Variables:	ON (CMND4)	
Group ID:	10	Time Code:	-5S	
Communication Info	times			
Communication mio	illiauon.			
Connection Type:	C Serial Virtual Port	° <u>E</u> thernet ⊂ RAS		
Session:	COM3 💌	Parity:	NONE	
Address:	02	Data Bits:	8 💌	
Back Out:	KKK (CMND3)	Stop Bits:	1 💌	
Phone Number:	1,610-882-2192	(CMND) Flow Control:	NONE	
Baud Rate:	9600 💌	Inter Char Delay:	0 msec	
			Save	Cancel

Device Manager Tools

- Create and maintain multiple device configurations.
- Duplicate option for fast configuration.
- Export configurations to CSV format.
- Import configurations from CSV formats.
- Archive and manage access and polling logs.

A Common Platform for Advanced Analysis

- Query and sort engines for user logs.
- Access devices with ASCII and Binary Terminals.
- Program function keys for manual polling.
- Program user scripts for automatic polling.

🕷 Device Manager: C: 🖓 rogram Files Borland Delphi 7/Bin/Wavewin/DTBS/Bitronics									
Devi	Port#	Туре	Address	Title	Driver	Group Name	Group ID		-
1 2 3 4 5 6 7 8 9 9 10 11 12 100 101 1999 2000	COM1 COM78 COM78 COM80 COM80 COM81 COM81 COM73 COM74 COM74 COM75 COM75 COM77 COM3 COM3 COM3 COM3 COM3	ASCII ASCII ASCII ASCII ASCII ASCII ASCII ASCII ASCII ASCII BINARY BINARY ASCII ASCII	xxx xxx 01 02 xxx 1	START SYSTEM MONITOR MESSAGE PATH BITRONICS-FTP-1 BITRONICS-FTP-3 BITRONICS-FTP-3 BITRONICS-FTP-3 BITRONICS-FTP-5 BITRONICS-FTP-5 BITRONICS-IP-2 BITRONICS-IP-2 BITRONICS-IP-4 BITRONICS-IP-4 BITRONICS-IP-4 BITRONICS-IP-4 BITRONICS-IP-4 BITRONICS DIAL UP - 02 CLOSE MODEM SERVICES	SYSTEM TIMER (START) MONITER MESSAGES P POLL FIP EVENTS POLL FIP EVENTS POLL FIP EVENTS POLL FIP EVENTS POLL FIP EVENTS NONE NONE NONE NONE NONE NONE NONE SYSTEM TIMER (START)	SOFTSTUF SOFTSTUF NJ SOFTSTUF MAIN OFFICE SOFTSTUF MAIN OFFICE OFFICE	50 50 80 80 80 80 80 80 80 80 10 10 10 10 10 10 10	$\begin{array}{c} 0 + 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 &$	3
-	-	-	-	-	=	(=)	-		
4									Y
TotRecs: 1	TotRecs: 16 AtRec: 16 TotMarks: 1 Sort Field: Device Number								

Connection Types

- Serial Ports RS232, RS422, and RS485
- Dialup Modems
- Virtual Serial Ports
- RAS (Remote Access Server)
- Ethernet (TCPIP)

			X
		1	
			Connect
	<u>N</u> ew		Sounder
	Save	1	S Disconnect
	-		Ping
			M M 1
<u>E</u> dit Dialup			🗙 Cļose
ATA			
Size	Date & Time	🔺 T.	Home
0	11/2/2012	. (rw-)	
0	11/2/2012	(rw-)	Back
70100	7/10/2016 11:	file (rw-)	
24960	7/10/2016 11:	file (rw-)	Refresh
21	7/10/2016 11:	file (rw-)	
21	7/10/2016 11:	file (rw-)	New Dir
6792	7/10/2016 11:	file (rw-)	Dubb
280	6/30/2016 4:5	file (rw-)	Delete
280	6/30/2016 4:5	file (rw-)	
- 02			<u> </u>

Protocol Types

- Proprietary Protocols for Relays and DFRs
- FTP (File Transfer Protocol)
- TCP/IP Server
- TCP/IP Client
- Telnet Client
- SSH Client

Requirements and Support Services

- **Requirements** The software works with Windows NT, 7, 10 and 2008/2012/2016 servers. The software requires 32MB of storage space and, depending on usage, may use up to 2GB of available memory. The software supports local and shared drives on the network, it is small, structured, and non-intrusive (does not modify any operating system files).
- **Technical Support** Standard technical support services are available at 800.818.3463 or at support@softstuf.com.
- Custom Services For custom development services please contact our support team at <u>support@softstuf.com</u>.
- **Training** We offer a variety of training classes, for information on these classes please use this link <u>www.softstuf.com/wavewinclasses.html</u>. For other training inquires please contact our support team at <u>support@softstuf.com</u>.
- Warranties Softstuf warrants that the software will substantially achieve the functionality as advertised and described in the Manuals. In the event any future deficiency is discovered in the software then Softstuf shall at its own sole expense make the changes necessary to correct said deficiency within a reasonable time of being notified.
- **New Devices** Softstuf will initially provide an extensive library of drivers for working with various types of event and fault data records from various types of numerical relays, digital meters, and fault recorders. In the event new drivers are requested then Softstuf will develop said drivers at rates and lead times that are mutually agreed upon.

Licensing and Upgrades

• The Device Manager is a standalone executable. Each copy requires activation and is downloaded from the website. Several trial runs are allowed before activation is required.

A Common Platform for Advanced Analysis

- The Viewer can be installed on individual stations or on a network server. If used with a network server, then it will require an activation code per user account.
- Upgrades are available for download from the website, activation is also required.

Ordering Information

ltem	Part Number	Description
1	WWDM-WEB	Downloadable zip file containing the software, all software documentation and an install program. Open the install program and follow the instructions to begin using the software.

Contact Us

Sales:	<u>sales@softstuf.com</u>
Support:	<u>support@softstuf.com</u>
Phone:	800.818.3463
Fax:	609.677.8736
Hours:	Monday thru Friday, 9:00 am to 5:00 pm EST